


# TUR0141

*FLOWRATE INDICATOR / TOTALIZER*

*WITH SCALED PULSE OUTPUT AND FAST SETUP*

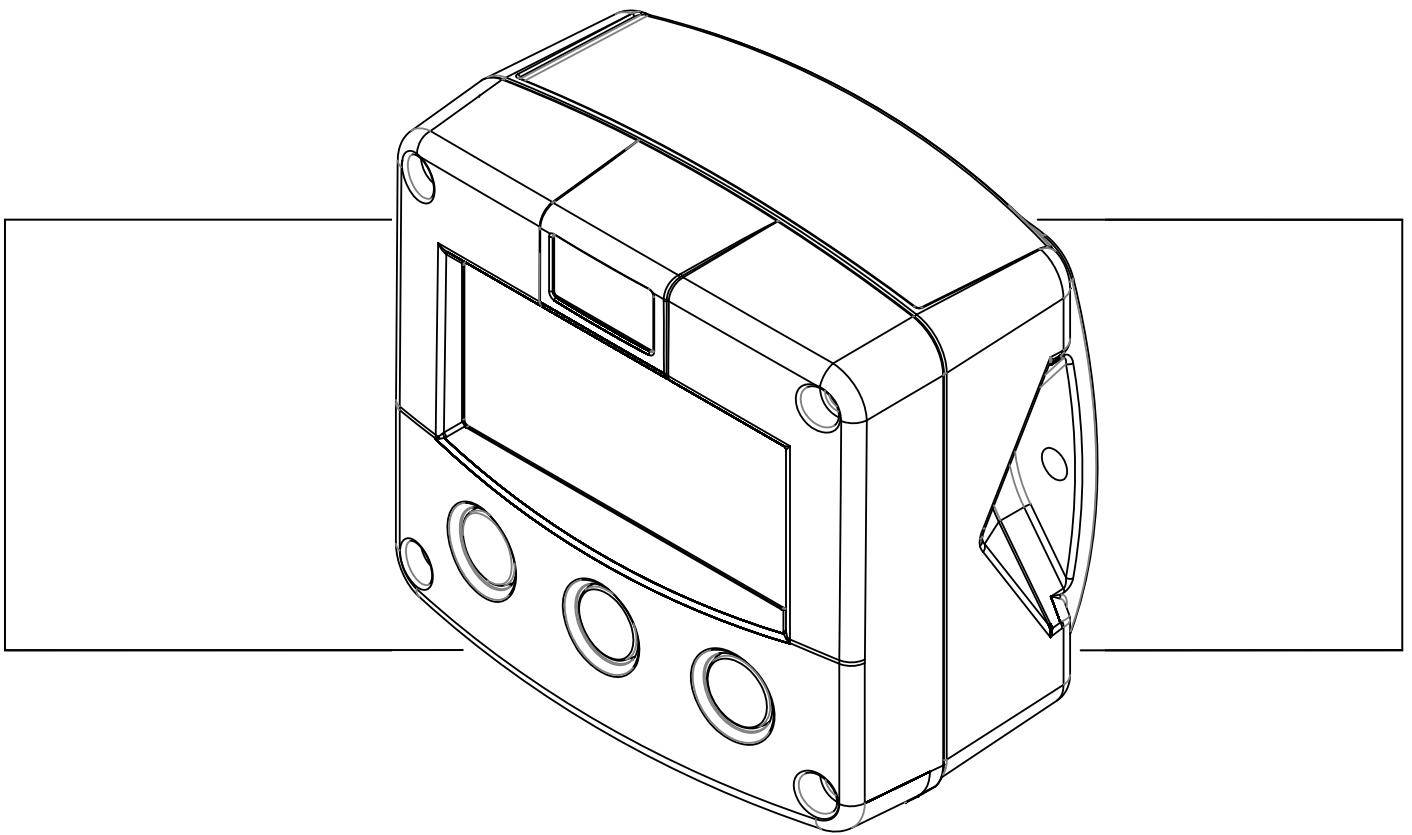

*Signal input flowmeter: coil.*

*Output: one scaled pulse ref. accumulated total.*

*Options: Intrinsically Safe.*



## SAFETY INSTRUCTIONS

- Any responsibility is lapsed if the instructions and procedures as described in this manual are not followed.
- **LIFE SUPPORT APPLICATIONS:** The TUR0141 is not designed for use in life support appliances, devices, or systems where malfunction of the product can reasonably be expected to result in a personal injury. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify the manufacturer and supplier for any damages resulting from such improper use or sale.
- **Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.**
- **This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).**
- **Do connect a proper grounding to the aluminum casing as indicated if the TUR0141 has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.**
- **Intrinsically Safe applications: follow the instructions as mentioned in Chapter 5 and consult “Fluidwell F0...-P-XI - Documentation for Intrinsic Safety”.**

## DISPOSAL



At the end of its life this product should be disposed of according to local regulations regarding waste electronic equipment. If a battery is present in this product it should be disposed of separately. The separate collection and recycling of your waste equipment will help to conserve natural resources and ensure that it is recycled in a manner that protects the environment.

## SAFETY RULES AND PRECAUTIONARY MEASURES

- The manufacturer accepts no responsibility whatsoever if the following safety rules and precautions instructions and the procedures as described in this manual are not followed.
- Modifications of the TUR0141 implemented without preceding written consent from the manufacturer, will result in the immediate termination of product liability and warranty period.
- Installation, use, maintenance and servicing of this equipment must be carried out by authorized technicians.
- Check the mains voltage and information on the manufacturer's plate before installing the unit.
- Check all connections, settings and technical specifications of the various peripheral devices supplied with the TUR0141.
- Open the casing only if all leads are free of potential.
- Never touch the electronic components (ESD sensitivity).
- Never expose the system to heavier conditions than allowed according to the casing classification (see manufacture's plate and chapter 4.2.).
- If the operator detects errors or dangers, or disagrees with the safety precautions taken, then inform the owner or principal responsible.
- The local labor and safety laws and regulations must be adhered to.

## ABOUT THE INSTRUCTION MANUAL

This instruction manual is divided into two main sections:

- The daily use of the unit is described in chapter 2 "Operation". These instructions are meant for users.
- The following chapters and appendices are exclusively meant for electricians/technicians. These provide a detailed description of all software settings and hardware installation guidance.

This operation manual describes the standard unit as well as most of the options available. For additional information, please contact your supplier.

**A hazardous situation may occur if the TUR0141 is not used for the purpose it is designed for or is used incorrectly. Please carefully note the information in this operating manual indicated by the pictograms:**



A "**warning**" indicates actions or procedures which, if not performed correctly, may lead to personal injury, a safety hazard or damage of the TUR0141 or connected instruments.



A "**caution**" indicates actions or procedures which, if not performed correctly, may lead to personal injury or incorrect functioning of the TUR0141 or connected instruments.



A "**note**" indicates actions or procedures which, if not performed correctly, may indirectly affect operation or may lead to an instrument response which is not planned.

Hardware version	:	FB03.03.xx
Software version	:	03.06xx
Manual	:	TUR0141_v0402_06
© Copyright 2012	:	Fluidwell bv - The Netherlands.

**Information in this manual is subject to change without prior notice. The manufacturer is not responsible for mistakes in this material or for incidental damage caused as a direct or indirect result of the delivery, performance or use of this material.**

**© All rights reserved. No parts of this publication may be reproduced or used in any form or by any means without written permission of your supplier.**

# CONTENTS MANUAL

Safety instructions .....	2
Disposal .....	2
Safety rules and precautionary measures .....	2
About the instruction manual .....	3
Contents manual.....	4
1. Introduction .....	5
1.1. System description of the TUR0141 .....	5
2. Operational.....	6
2.1. General .....	6
2.2. Control panel.....	6
2.3. Operator information and functions .....	7
3. Configuration .....	8
3.1. Introduction .....	8
3.1.1. General instructions .....	8
3.2. Programming FAST Setup level .....	11
3.2.4. Explanation of FAST Setup-functions .....	11
3.3. Programming FULL Setup level.....	12
3.2.3. Overview functions FULL Setup level.....	12
3.2.4. Explanation of FULL Setup-functions .....	13
0 - Preconfig.....	13
1 - Total.....	13
2 - Flowrate .....	14
3 - Display .....	15
4 - Power management .....	15
5 - Flowmeter .....	16
6 - Pulse output.....	16
7 - Others .....	16
4. Installation .....	17
4.1. General directions .....	17
4.2. Installation / surrounding conditions .....	17
4.3. Dimensions- Enclosure .....	18
4.4. Installing the hardware.....	20
4.4.1. Introduction .....	20
4.4.2. Terminal connectors with power supply - <u>type : PB / PD / PX</u> .....	21
4.4.3. Terminal connectors with power supply - <u>type : PF / PM</u> .....	22
5. Intrinsically safe applications.....	25
5.1. General information and instructions: .....	25
5.2. Terminal connectors Intrinsically Safe applications: .....	26
5.3. Configuration examples Intrinsically Safe applications:.....	27
5.4. Battery replacement instructions.....	28
6. Maintenance.....	29
6.1. General directions .....	29
6.2. Repair.....	29
Appendix A: Technical specification .....	30
Appendix B: Problem solving.....	33
Appendix C: Preconfigured FAST setup settings .....	34
Index of this manual.....	35
List of figures in this manual .....	35

# 1. INTRODUCTION

## 1.1. SYSTEM DESCRIPTION OF THE TUR0141

### Functions and features


The flowrate / totalizer model TUR0141 is a microprocessor driven instrument designed to display flowrate, total and accumulated total as well as to generate a scaled pulse according the accumulated total. This product has been designed with a focus on:

- ultra-low power consumption to allow long-life battery powered applications (type PB / PC),
- intrinsic safety for use in hazardous applications (type XI),
- several mounting possibilities with GRP or aluminum enclosures for industrial surroundings,
- optimized for TM series Turbine flowmeters.
- transmitting possibilities with one configurable output.
- Fast Setup

### Flowmeter input

This manual describes the unit with a coil type pulse input from the flowmeter.

One flowmeter with a coil signal output can be connected to the TUR0141. To power the sensor, several options are available.

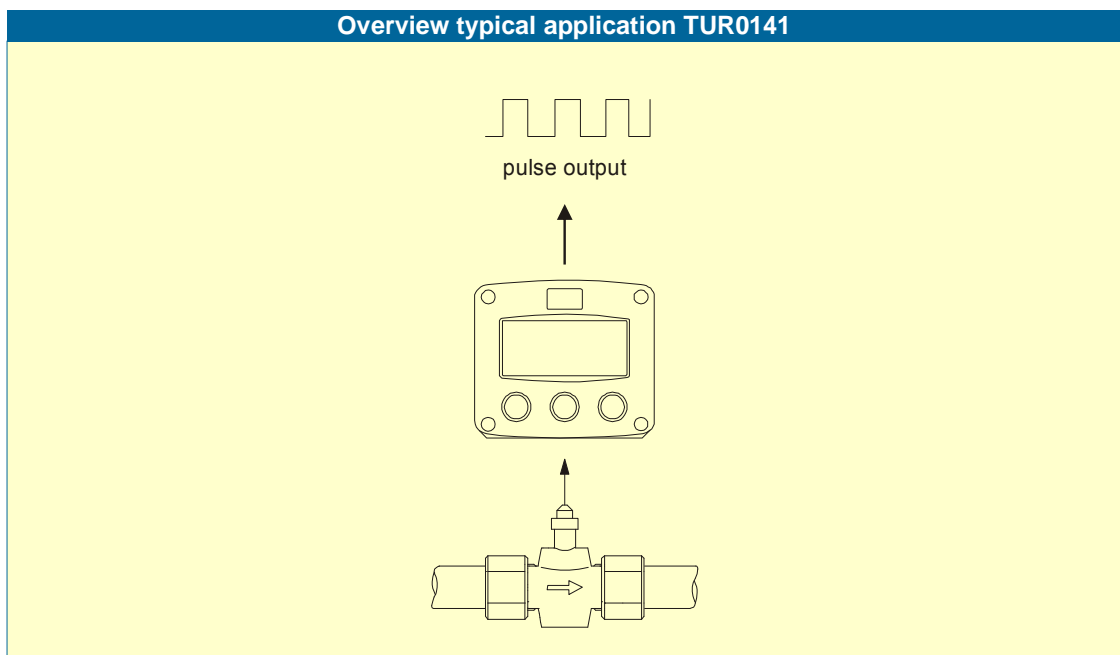

*Fig. 1: Typical application for the TUR0141.*

### Configuration of the unit

The TUR0141 is designed to be implemented in many types of applications. There are two configuration menu's available in this system, a preconfigured FAST Setup menu and a FULL Setup menu. Setup includes several important features, such as K-Factor, measurement units, signal selection etc. All settings are stored in EEPROM memory and will not be lost in the event of power failure. To extend the battery-life time, please use of the power-management functions as described in chapter 4.4.2.

### Display information

The unit has a large transfective LCD with all kinds of symbols and digits to display measuring units, status information, trend-indication and key-word messages.

Flowrate and totals can be displayed either with the small 8mm digits or with the 17mm digits.

A backup of the total and accumulated total in EEPROM memory is made every minute.

### Options

The following options are available: intrinsic safety, panel-mount, wall-mount and weather-proof enclosures, flame proof enclosure and LED backlight.

## 2. OPERATIONAL

### 2.1. GENERAL



- *The TUR0141 may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures" in the front of this manual.*

This chapter describes the daily use of the TUR0141. This instruction is meant for users / operators.

### 2.2. CONTROL PANEL

The following keys are available:



Fig. 2: Control Panel.

#### Functions of the keys



This key is used to program and save new values or settings.  
It is also used to gain access to SETUP-level; please read chapter 3.



This key is used to SELECT accumulated total.  
The arrow-key ▲ is used to increase a value after PROG has been pressed or to configure the unit; please read chapter 3.



Press this key twice to CLEAR the value for total.  
The arrow-key ► is used to select a digit after PROG has been pressed or to configure the unit; please read chapter 3.

### 2.3. OPERATOR INFORMATION AND FUNCTIONS

In general, the TUR0141 will always function at Operator level. All information displayed depends on the SETUP-settings. The signal from the connected sensor is processed by the TUR0141 in the background, whichever screen refresh rate setting is chosen. After pressing a key, the display will be updated quickly during a 30 second period, after which it will slow-down again.



Fig. 3: Example of display information during process.

For the Operator, the following functions are available:

- **Display flowrate / total or flowrate**  
This is the main display information of the TUR0141. After selecting any other information, it will always return to this main display automatically.  
Total is displayed on the upper-line of the display and flowrate on the bottom line.  
It is possible to display flowrate only with the large 17mm digits; in this instance press the SELECT-key to read the total.  
When "-----" is shown, then the flowrate value is too high to be displayed. The arrows  $\blacktriangleleft$   $\blacktriangleright$  indicate the increase/decrease of the flowrate trend.
- **Clear total**  
The value for total can be re-initialized. To do so, press CLEAR twice. After pressing CLEAR once, the flashing text "PUSH CLEAR" is displayed. To avoid re-initialization at this stage, press another key than CLEAR or wait for 20 seconds.  
Re-initialization of total DOES NOT influence the accumulated total.
- **Display accumulated total**  
When the SELECT-key is pressed, total and accumulated total are displayed. The accumulated total cannot be re-initialized. The value will count up to 99,999,999,999. The unit and number of decimals are displayed according to the configuration settings for total.
- **Low-battery alarm**  
When the battery voltage drops, it must be replaced. At first "low-battery" will flash, but as soon as it is displayed continuously, the battery MUST be replaced shortly after!  
Only original batteries supplied by the manufacturer may be used, else the guarantee and liability will be terminated. The remaining lifetime after the first moment of indication is generally several days up to some weeks.



Fig. 4: Example of low-battery alarm.

- **Alarm 01-03**  
When "alarm" is displayed, please consult Appendix B: problem solving.

### 3. CONFIGURATION

#### 3.1. INTRODUCTION

This and the following chapters are exclusively meant for electricians and non-operators. In these, an extensive description of all software settings and hardware connections are provided.



Caution !

- *Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *The TUR0141 may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

##### 3.1.1. GENERAL INSTRUCTIONS

Configuration of the TUR0141 is done at SETUP level.

SETUP level is entered by pressing the PROG/ENTER key for 7 seconds. While pressing both arrows  $\blacktriangleleft$  will be displayed.


In order to return to the operator level, PROG will have to be pressed for three seconds. Alternatively, if no keys are pressed for 2 minutes, the unit will exit SETUP automatically. SETUP can be reached at all times while the TUR0141 remains fully operational.



Note !

**Note:** A pass code may be required to enter SETUP. Without this pass code access to SETUP is denied.

To enter SETUP-level:

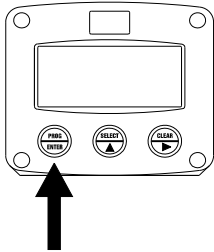

Press  for 7 seconds

##### FAST versus FULL Setup




The SETUP menu contains two entry levels. A FAST Setup (default) and a FULL Setup (option):

- FAST Setup allows quick configuration by selecting a flowmeter and desired display units. The unit then determines the required process parameters, such as K-factor, matching these settings.
- FULL Setup provides an advanced configuration menu allowing detailed programming and tuning of individual settings.



**Matrix structures SETUP-levels:**

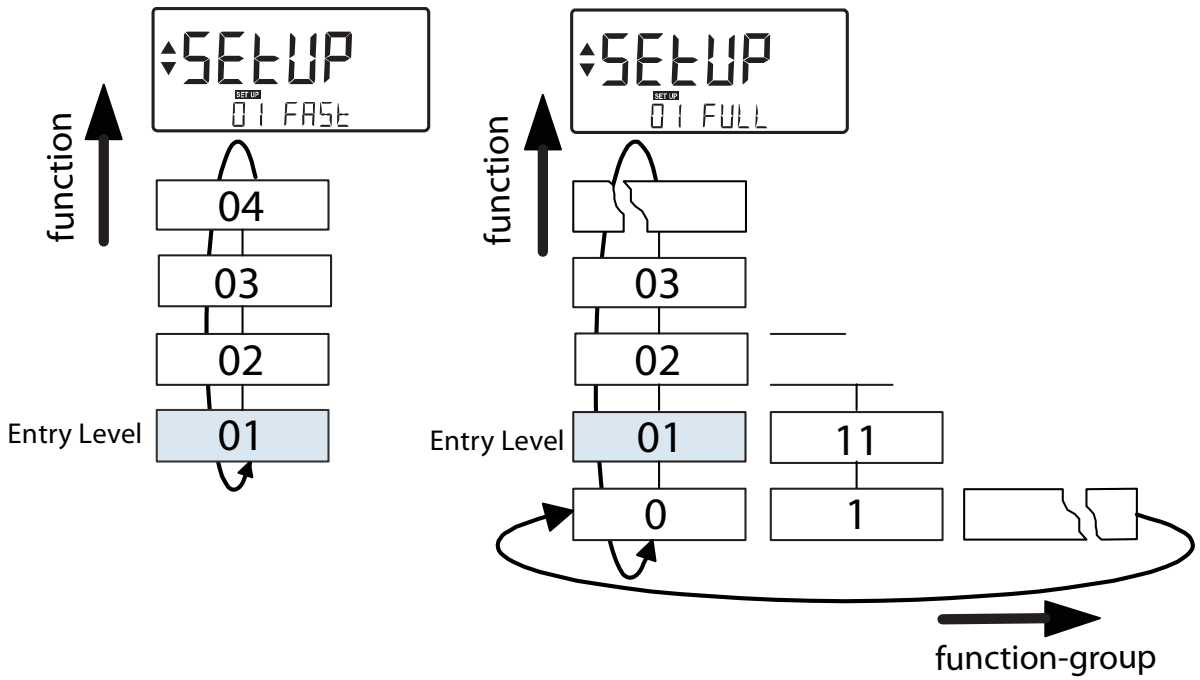


- FAST Setup has a reduced set of functions
- FULL Setup has an extended set of functions, separated over several function groups

**SCROLLING THROUGH SETUP-LEVELS**

**Selection of function-group and function:**


SETUP is divided into several function groups and functions.

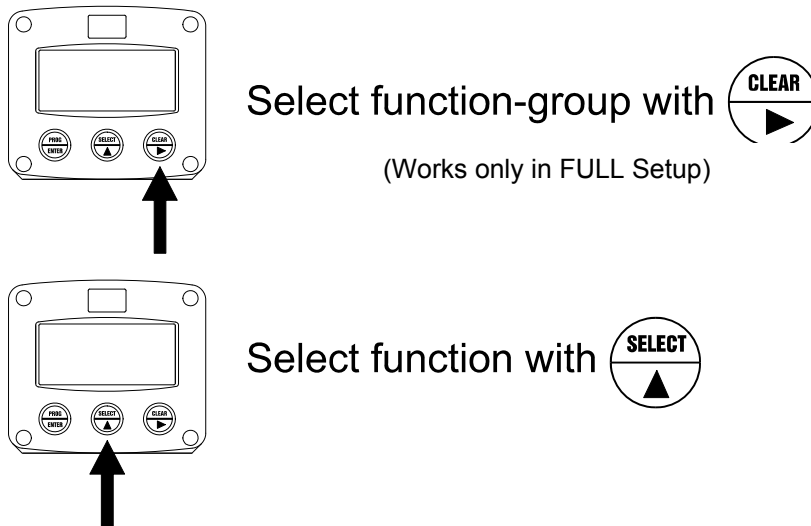







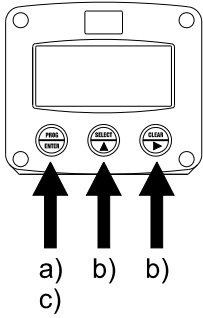

Each function has a unique number, which is displayed below the word "SETUP" at the bottom of the display. The number is a combination of two figures. The first figure indicates the function-group and the second figure the sub-function. Additionally, each function is expressed with a keyword.


After selecting a sub-function, the next main function is selected by scrolling through all "active" sub-functions (e.g. 1<sup>▲</sup>, 11<sup>▲</sup>, 12<sup>▲</sup>, 13<sup>▲</sup>, 14<sup>▲</sup>, 1<sup>▶</sup>, 2<sup>▶</sup>, 3<sup>▲</sup>, 31 etc.). The "CLEAR" button can be used to jump a step back if you missed the desired function.

To change or select a value:



- a) press  briefly; **PROGRAM** will start flash
- b) select or enter value with  and / or 
- c) press  to confirm the value / selection.

To change a value, use  to select the digits and  to increase that value. If the new value is invalid, the increase sign  or decrease-sign  will be displayed while you are programming.


To select a setting,  is used to select in one direction and  can be used to select in the other direction.

When data is altered but ENTER is not pressed, then the alteration can still be cancelled by waiting for 20 seconds or by pressing ENTER for three seconds: the PROG-procedure will be left automatically and the former value reinstated.



**Note:** Alterations will only be set after ENTER has been pressed!

To return to OPERATOR-level:

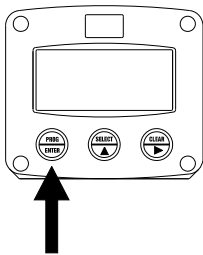

Press  for 3 seconds

In order to return to the operator level, PROG will have to be pressed for three seconds. Also, when no keys are pressed for 2 minutes, SETUP will be left automatically.

**3.2. PROGRAMMING FAST SETUP LEVEL**

FAST Setup allows quick configuration by selecting a flowmeter and desired display units. The unit then determines the required process parameters, such as K-factor, matching these settings.

A reference table in the back of this manual identifies the relation between selected flowmeter, display units and predefined process parameters.

**3.2.4. EXPLANATION OF FAST SETUP-FUNCTIONS**

FAST Setup contains four setup items as described below.

<b>0-PRECONFIG</b>	
The Preconfig menu determines the type of configuration menu (FAST or FULL) and contains the settings for FAST Setup. (For an overview of FAST Setup settings see appendix C)	
<b>SETUP 01</b>	Determines the type of configuration menu. The following can be selected: FAST-FULL  Select fast for a FAST Setup menu with options below or select full to skip and switch to the detailed FULL Setup menu, described in chapter 3.3
<b>CONFIG 02</b>	Determines the flowmeter type on which the FAST Setup settings will be based. The following flowmeters can be selected: TM0038 - TM0038 - TM0050 - TM0078 - TM0100 - TM0150 - TM0200L - TM0200 - TM0300 - TM0400 - TM0600 - TM0800 - TM1000
<b>UNIT 03</b>	Determines the displayed volume units for Flow and Total. The K-factor to convert flowmeter signal is calculated based on selected units. The following volume units can be selected for Flow and Total: GAL/BBL
<b>TIME UNIT 14</b>	Determines the displayed time setting for flow measurement. The K-factor to convert flowmeter signal is calculated based on selected units per time. The following time units can be selected for Flow: Min/Hr/Day/Sec



**Notes:** If “MANUAL” appears on display one or more default FAST Setup parameters have been modified in FULL Setup.

*FAST Setup defines basic process parameters for quick deployment of the TUR0141 only. For detailed configuration options refer to FULL Setup (see chapter 3.3).*

### 3.3. PROGRAMMING FULL SETUP LEVEL

FULL Setup provides an advanced configuration menu allowing detailed programming and tuning of individual settings.

To access FULL Setup select full in SETUP item 01. Then select the function group with **▶** (CLEAR). See 3.3.1 below for an overview of function groups and setup items.

#### 3.2.3. OVERVIEW FUNCTIONS FULL SETUP LEVEL

<b>SETUP FUNCTIONS AND VARIABLES</b>			
<b>0</b>	<b>PRECONFIG</b>		
	01	SETUP	FAST- FULL
	02	CONFIG	TM0038 - TM0050 - TM0075 - TM0078 - TM0100 - TM0150 - TM0200L - TM0200 - TM0300 - TM0400 - TM0600 - TM0800 - TM1000
	03	UNIT	GAL-bbl
	04	TIME UNIT	Min - Hr - Day - Sec.
<b>1</b>	<b>TOTAL</b>		
	11	UNIT	L - m3 - kg - lb - GAL - USGAL - bbl - no unit
	12	DECIMALS	0 - 1 - 2 - 3 (Ref: displayed value)
	13	K-FACTOR:	0.000010 - 9,999,999
	14	DECIMALS K-FACTOR	0 - 6
<b>2</b>	<b>FLOWRATE</b>		
	21	UNIT	mL - L - m3 - mg - g - kg - ton - GAL - bbl - lb - cf - REV - no unit - scf - Nm3 - NL - P
	22	TIME UNIT	sec - min - hour - day
	23	DECIMALS	0 - 1 - 2 - 3 (Ref: displayed value)
	24	K-FACTOR	0.000010 - 9,999,999
	25	DECIMALS K-FACTOR	0 - 6
	26	CALCULATION	per 1 - 255 pulses
	27	CUT-OFF	0.1 - 999.9 seconds
<b>3</b>	<b>DISPLAY</b>		
	31	FUNCTION	total - flowrate
	32	BACKLIGHT (optional)	off - green - amber
	33	BL. BRIGHTNESS	1 - 5
<b>4</b>	<b>POWER MANAGEMENT</b>		
	41	LCD UPDATE	fast - 1 sec - 3 sec - 15 sec - 30 sec - off
	42	BATTERY MODE	operational - shelf
<b>5</b>	<b>FLOWMETER</b>		
	51	SIGNAL	coil_hi - coil_lo
<b>6</b>	<b>PULSE OUTPUT</b>		
	61	PULSE WIDTH	0.001 - 9.999 sec
	62	DECIMALS	0 - 1 - 2 - 3
	63	IMPULSE PER	X-quantity
<b>7</b>	<b>OTHERS</b>		
	71	MODEL	F0-P
	72	TYPE	TUR0141
	73	SOFTWARE VERSION	03.xx.xx
	74	SERIAL NO.	xxxxxxx
	75	PASS CODE	0000 - 9999
	76	TAGNUMBER	0000000 - 9999999

## 3.2.4. EXPLANATION OF FULL SETUP-FUNCTIONS

<b>0 - PRECONFIG</b>	
The Preconfig menu determines the type of configuration menu (FAST or FULL) and contains the settings for FAST setup. (For an overview of FAST Setup settings see appendix C)	
<b>SETUP 01</b>	Determines the type of configuration menu. The following can be selected: FAST-FULL  Select fast for a FAST Setup menu with options below or select full to skip and switch to the detailed FULL Setup menu, described in chapter 3.3
<b>CONFIG 02</b>	Determines the flowmeter type on which the FAST Setup settings will be based. The following flowmeters can be selected: TM0038 - TM0038 - TM0050 - TM0078 - TM0100 - TM0150 - TM0200L - TM0200 - TM0300 - TM0400 - TM0600 - TM0800 - TM1000
<b>UNIT 03</b>	Determines the displayed volume units for Flow and Total. The K-factor to convert flowmeter signal is calculated based on selected units. The following volume units can be selected for Flow and Total: GAL/BBL
<b>TIME UNIT 14</b>	Determines the displayed time setting for flow measurement. The K-factor to convert flowmeter signal is calculated based on selected units per time. The following time units can be selected for Flow: Min/Hr/Day/Sec
<b>1 - TOTAL</b>	
<b>MEASUREMENT UNIT 11</b>	SETUP - 11 determines the measurement unit for total and accumulated total. The following units can be selected L - m3 - kg - lb. - GAL - USGAL - bbl - _ (no unit).  Alteration of the measurement unit will have consequences for operator and SETUP-level values. Please note that the K-factor has to be adapted as well; the conversion calculation is not done automatically.
<b>DECIMALS 12</b>	The decimal point determines for total and accumulated total the number of digits following the decimal point. The following can be selected: 000000 - 111111.1 - 22222.22 - 3333.333
<b>K-FACTOR 13</b>	With the K-factor, the flowmeter pulse signals are converted to a quantity. The K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 11), for example per cubic meter. The more accurate the K-factor, the more accurate the functioning of the system will be. <b>Example 1: Calculating the K-factor.</b> <i>For example: the selected flowmeter generates 920 pulses per gallon and the selected unit is bbl. A bbl consists of 42 gallons which implies 38640 pulses per bbl. So, the K-factor is 38640. Enter for SETUP - 13: "3864000 " and for SETUP - 14 - decimals K-factor "2" (resulting in 38640,00)</i>  <b>Example 2: Calculating the K-factor.</b> <i>For example: the flowmeter generates 920 pulses per gallon and the selected measurement unit is gallons. So, the K-Factor is 920. Enter for SETUP - 13: "9200000" and for SETUP - 14 decimals K-factor "4".</i>
<b>DECIMALS K-FACTOR 14</b>	This setting determines the number of decimals for the K-factor entered. (SETUP 13). The following can be selected:  0 - 1 - 2 - 3 - 4 - 5 - 6  Please note that this setting influences the accuracy of the K-factor indirectly. (i.e. the position of the decimal point and thus the value given) This setting has NO influence on the displayed number of digits for total (SETUP 12)!

## 2 - FLOWRATE

The settings for total and flowrate can be separate. In this way, different units of measurement can be used for each e.g. bbl for total and gallons for flowrate.  
The display update time for flowrate is one second or more.

<b>MEASUREMENT UNIT 21</b>	<p>SETUP - 21 determines the measurement unit for flowrate. The following units can be selected:</p> <p style="text-align: center;">mL - L - m3 - mg - g - kg - ton - GAL - bbl - lb - cf - REV - no unit - scf - Nm3 - NL - P.</p> <p>Alteration of the measurement unit will have consequences for operator and SETUP-level values. Please note that the K-factor has to be adapted as well; the calculation is not done automatically.</p>
<b>TIME UNIT 22</b>	The flowrate can be calculated per second (SEC), minute (MIN), hour (HR) or day (DAY).
<b>DECIMALS 23</b>	<p>This setting determines for flowrate the number of digits following the decimal point. The following can be selected:</p> <p style="text-align: center;">00000 - 1111.1 - 2222.22 - 3333.333</p>
<b>K-FACTOR 24</b>	<p>With the K-factor, the flowmeter pulse signals are converted to a flowrate. The K-factor is based on the number of pulses generated by the flowmeter per selected measurement unit (SETUP 21), for example per gallon. The more accurate the K-factor, the more accurate the functioning of the system will be. For examples read SETUP 13.</p>
<b>DECIMALS K-FACTOR 25</b>	<p>This setting determines the number of decimals for the K-factor (SETUP 24). The following can be selected:</p> <p style="text-align: center;">0 - 1 - 2 - 3 - 4 - 5 - 6</p> <p>Please note that this SETUP - influences the accuracy of the K-factor indirectly. This setting has NO influence on the displayed number of digits for "flowrate" (SETUP 23)!</p>
<b>CALCULATION 26</b>	<p>The flowrate is calculated by measuring the time between a number of pulses, for example 10 pulses. The more pulses the more accurate the flowrate will be. The maximum value is 255 pulses.</p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• <i>the lower the number of pulses, the higher the power consumption of the unit will be (important for battery powered applications).</i></li> <li>• <i>for low frequency applications (below 10Hz): do not program more than 10 pulses else the update time will be very slow.</i></li> <li>• <i>for high frequency application (above 1kHz) do program a value of 100 or more pulses.</i></li> </ul>
<b>CUT-OFF TIME 27</b>	<p>With this setting, you determine a minimum flow requirement threshold, if during this time less than XXX-pulses (SETUP 26) are generated, the flowrate will be displayed as zero. The cut-off time has to be entered in seconds - maximum time is 999 seconds (about 15 minutes).</p>



Note !

3 - DISPLAY	
<b>FUNCTION</b> <b>31</b>	The large 17mm digits can be set to display total or flowrate. When "total" is selected, both total and flowrate are displayed simultaneously. When "flowrate" is selected, only flowrate will be displayed with its measuring unit while total will be displayed after pressing SELECT.
The functions below will only effect the optional LED-backlight.	
<b>BACKLIGHT (OPTION)</b> <b>32</b>	If a LED backlight has been supplied, the color can be selected. Following selections are available:  <p style="text-align: center;">OFF - GREEN - AMBER</p>
<b>BRIGHTNESS (OPTION)</b> <b>33</b>	The density of the backlight can be set in following range:  <p style="text-align: center;">1 - 5</p> One is minimum and five is maximum brightness.

4 - POWER MANAGEMENT	
When used with the internal battery option, the user can expect reliable measurement over a long period of time. The TUR0141 has several smart power management functions to extend the battery life time significantly. Two of these functions can be set:	
<b>LCD NEW</b> <b>41</b>	The calculation of the display-information influences the power consumption significantly. When the application does not require a fast display update, it is <b>strongly advised</b> to select a slow refresh rate. Please understand that NO information will be lost; every pulse will be counted and the output signal will be generated in the normal way. The following can be selected:  <p style="text-align: center;">Fast - 1 sec - 3 sec - 15 sec - 30 sec - off.</p> <p><b>Example battery life-time:</b>  <i>life-time with a coil pick-up, 1kHz. pulses and FAST update: about 2 years.</i>  <i>life-time with a coil pick-up, 1kHz. pulses and 1 sec update: about 5 years.</i></p> <p><b>Note:</b> <i>the display refresh rate will always switch to FAST for 30 seconds when a button is pressed by the operator. When "OFF" is selected, the display will be switched off after 30 seconds and will activate as soon as a button is pressed.</i></p>
<b>BATTERY-MODE</b> <b>42</b>	The unit has two modes: operational or shelf. After "shelf" has been selected, the unit can be stored for several years; it will not process the sensor signal; the display is switched off but all settings and totals are stored. In this mode, power consumption is extremely low. To wake up the unit again, press the SELECT-key twice.



Note !

## 5 - FLOWMETER

<b>SIGNAL</b> 51	The TUR0141 is able to handle several types of coil signals. The type of flowmeter pickup / signal is selected with SETUP 51. Read also par. 4.4.2. or 4.4.3 - flowmeter input terminals.			
TYPE OF SIGNAL	EXPLANATION	RESISTANCE	FREQ. / MV	REMARK
COIL HI	High sensitive coil input	-	20mV p.t.p.	Sensitive for disturbance!
COIL LO	Low sensitive coil input	-	90mV p.t.p.	Normal sensitivity

## 6 - PULSE OUTPUT

One transistor output is available as scaled pulse output according to the accumulated total.

<b>PULSE WIDTH</b> 61	The pulse width determines the time that the output will be switched; in other words the pulse length. The minimum time between the pulses is as long as the period time (50/50 duty cycle). The pulse width is set in milliseconds in the range 0.001 - 9.999 sec. Value "zero" disable the pulse output.  <i><b>Note:</b> If the frequency should go out of range - when the flowrate increases for example - an internal buffer will be used to store the delayed pulses: As soon as the flowrate slows down, the buffer will be emptied. It might be that pulses will be missed due to a buffer-overflow, so it is advised to program this setting within its range!</i>
<b>DECIMALS</b> 62	This setting determines the decimal position for setting 63.  <i><b>Note:</b> the measuring unit is according to setting 11 (for total)</i>
<b>IMPULSE PER</b> 63	A pulse will be generated every X-quantity. Enter this quantity here while taking the displayed decimal position and measuring unit into account.



Note !



Note !

## 7 - OTHERS

<b>MODEL</b> 71	For support and maintenance it is important to have information about the characteristics of the F0-P. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
<b>72 TYPE</b>	TUR0141
<b>VERSION SOFTWARE</b> 73	For support and maintenance it is important to have information about the characteristics of the TUR0141. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
<b>SERIAL NUMBER</b> 74	For support and maintenance it is important to have information about the characteristics of the TUR0141. Your supplier will ask for this information in the case of a serious breakdown or to assess the suitability of your model for upgrade considerations.
<b>PASS CODE</b> 75	All SETUP-values can be pass code protected. This protection is disabled with value 0000 (zero). Up to and including 4 digits can be programmed, for example 1234.
<b>TAGNUMBER</b> 76	For identification of the unit and communication purposes, a unique tag number of maximum 7 digits can be entered.




## 4. INSTALLATION

### 4.1. GENERAL DIRECTIONS



- *Mounting, electrical installation, start-up and maintenance of this instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *The TUR0141 may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " at the front of this manual.*


### 4.2. INSTALLATION / SURROUNDING CONDITIONS

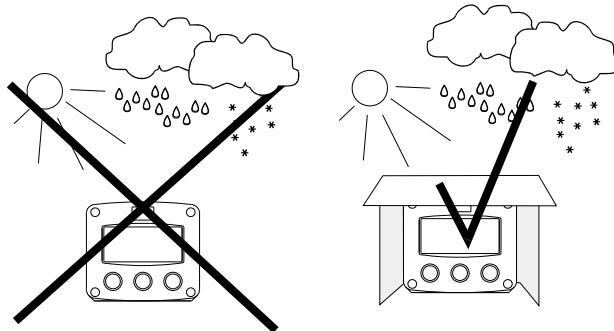

Take the relevant IP classification of the casing into account (see manufactures plate). Even an IP67 (NEMA 4X) casing should NEVER be exposed to strongly varying (weather) conditions.

When panel-mounted, the unit is IP65 (NEMA 4X)!

When used in very cold surroundings or varying climatic conditions, take the necessary precautions against moisture by placing a dry sachet of silica gel, for example, inside the instrument case.

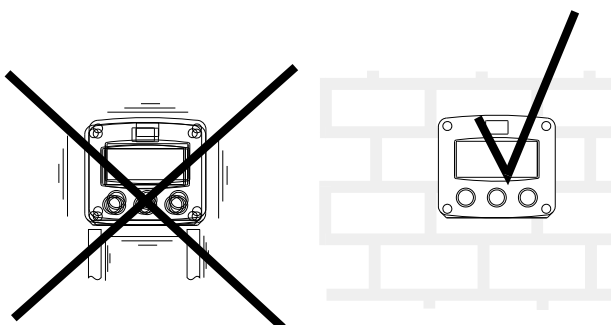

Mount the TUR0141 on a solid structure to avoid vibrations.

4.3. DIMENSIONS- ENCLOSURE

Aluminum enclosures:



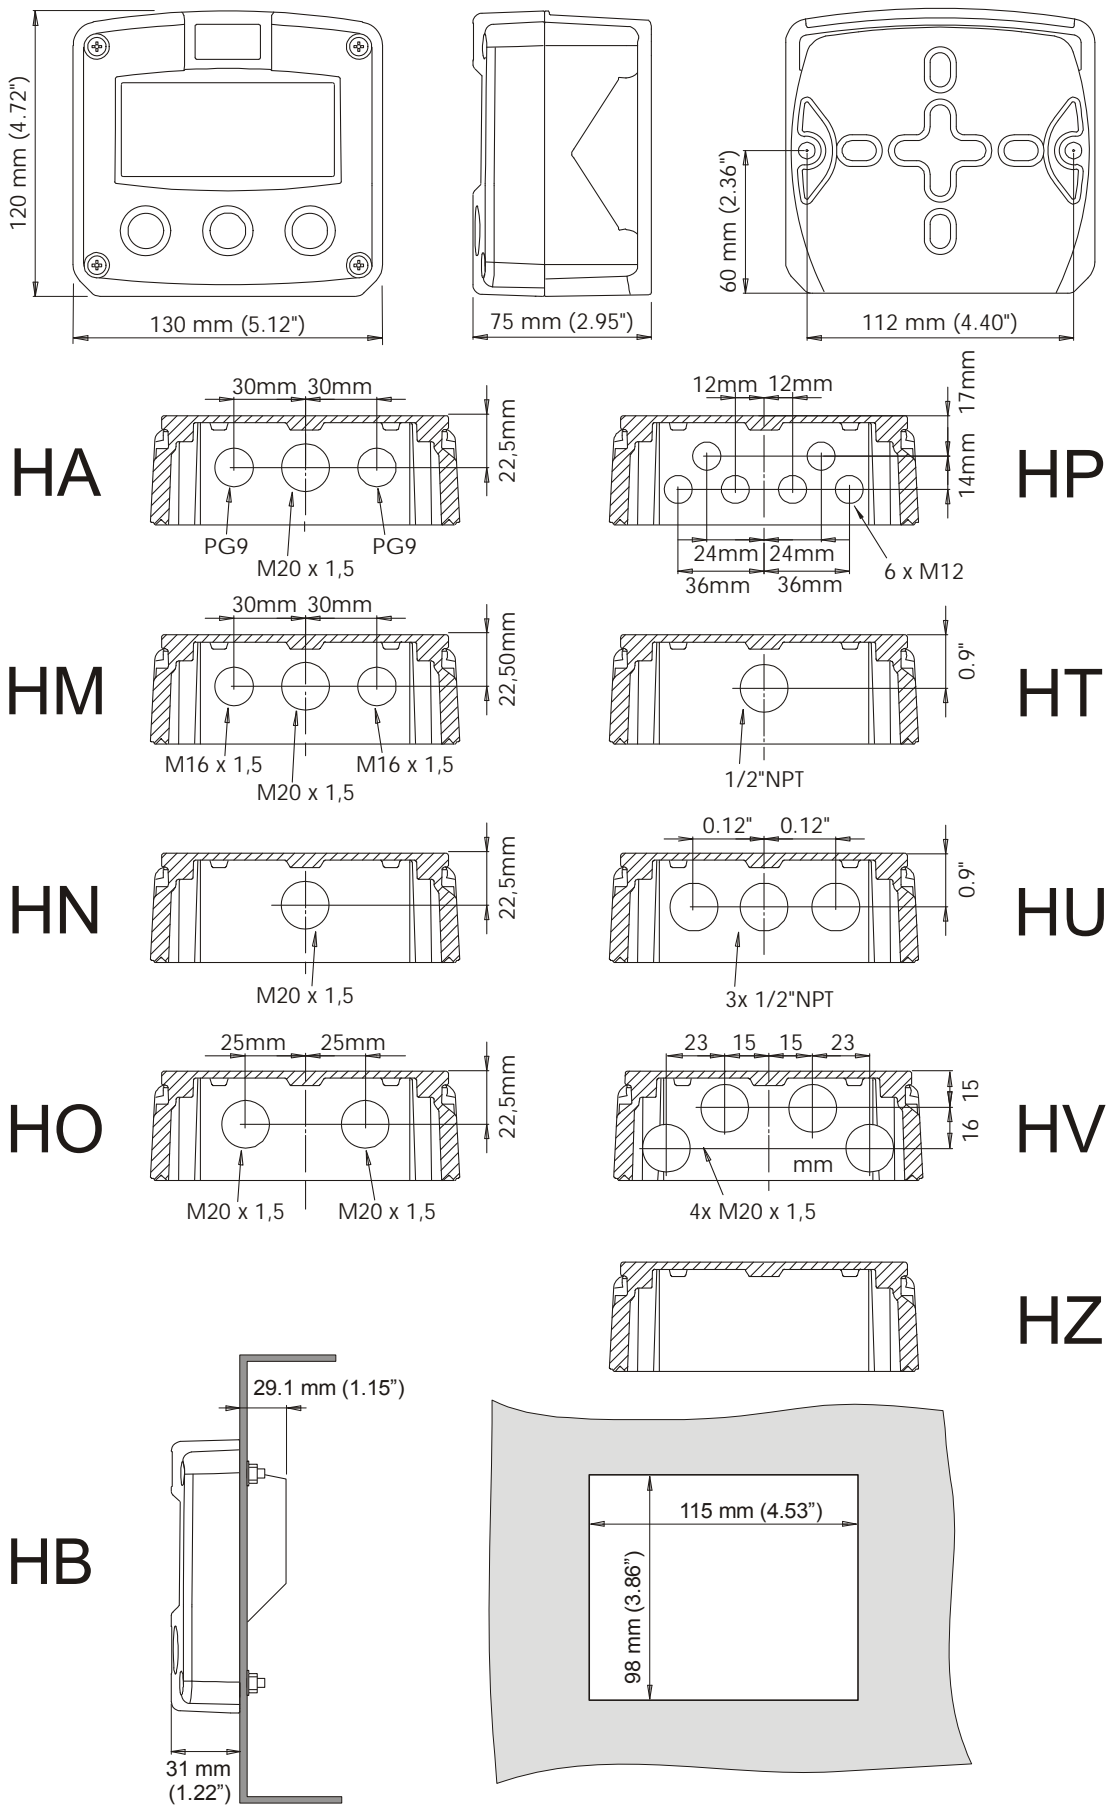


Fig. 5: Dimensions Aluminum enclosures.



GRP enclosures:

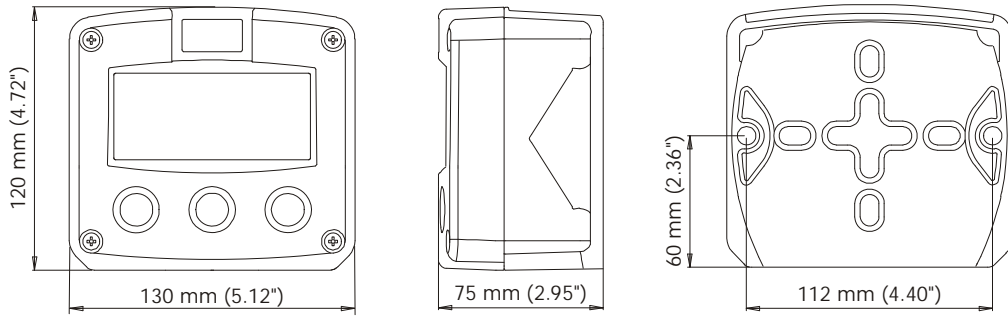

HK back box:  
(flat bottom)


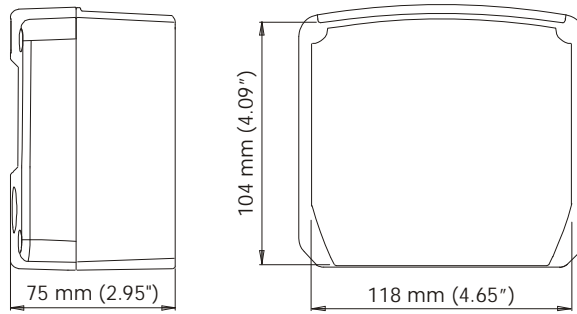


HD  
HK

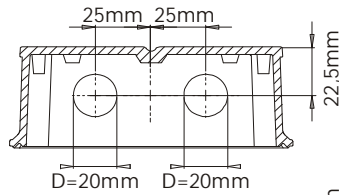



HG

HE

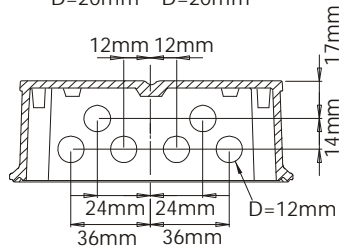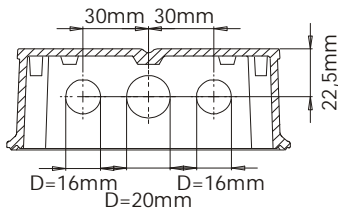

HH

HF

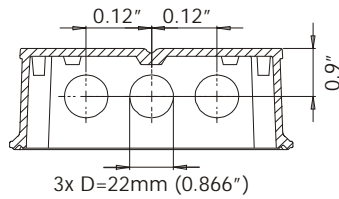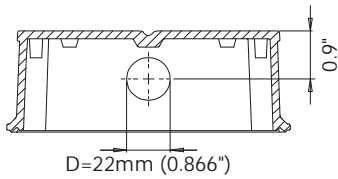

HJ

HC


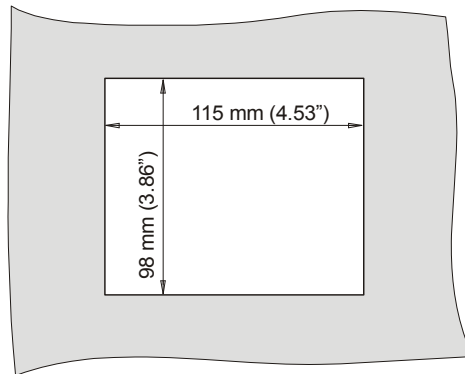


Fig. 6: Dimensions GRP enclosures.

#### 4.4. INSTALLING THE HARDWARE

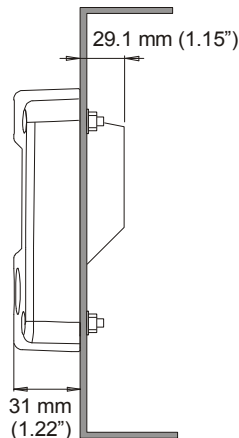

##### 4.4.1. INTRODUCTION

- Electro static discharge does inflict irreparable damage to electronics! Before installing or opening the unit, the installer has to discharge himself by touching a well-grounded object.
- This unit must be installed in accordance with the EMC guidelines (Electro Magnetic Compatibility).



##### Aluminum enclosures

- When installed in an aluminum enclosure and a potentially explosive atmosphere requiring apparatus of equipment protection level Ga and Da, the unit must be installed such that, even in the event of rare incidents, an ignition source due to impact or friction sparks between the enclosure and iron/steel is excluded.
- Do ground the aluminum enclosure properly as indicated, if the TUR0141 has been supplied with the 115-230V AC power-supply type PM. The green / yellow wire between the back-casing and removable terminal-block may never be removed.

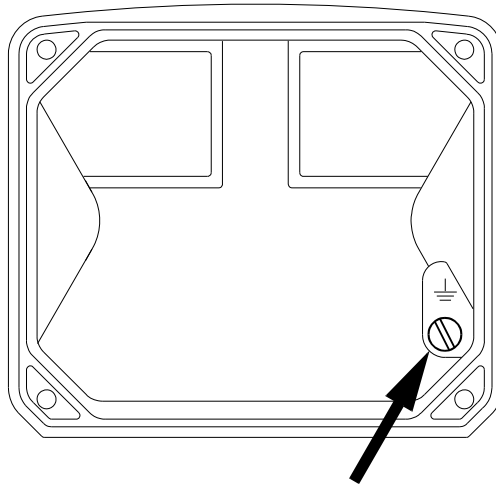


Fig. 7: Grounding aluminum enclosure with option PM 115-230V AC.

#### FOR INSTALLATION, PAY EMPHATIC ATTENTION TO:

- Separate cable glands with effective IP67 (NEMA4X) seals for all wires.
- Unused cable entries: ensure that you fit IP67 (NEMA4X) plugs to maintain rating.
- A reliable ground connection for both the sensor, and if applicable, for the metal casing. (above)
- An effective screened cable for the input signal, and grounding of its screen to the “⊥” terminal or at the sensor itself, whichever is appropriate to the application.

4.4.2. **TERMINAL CONNECTORS WITH POWER SUPPLY - TYPE : PB / PD / PX**

**For Intrinsically Safe applications: skip to chapter 5.**

The following terminal connectors are available:

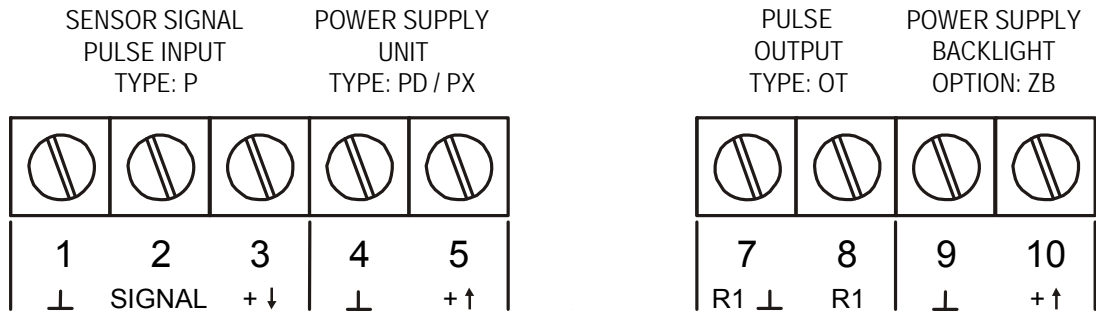


Fig. 8: Overview of terminal connectors TUR0141-(PB / PD / PX) and options.

**SENSOR SUPPLY**

**Type PB / PD / PX - terminal 3: sensor supply 1.2V**

Terminal 3 provides a limited supply voltage of 1.2V for the signal output of the flowmeter.



Note !

**Note:** This voltage MAY NOT be used to power the flowmeters electronics, converters etc, as it will not provide adequate sustained power ! All energy used by the flowmeters pick-up will directly influence the battery life-time (type PB).

**REMARKS: TERMINAL CONNECTORS:**

**Terminals 1-3; Flowmeter input:**

The TUR0141 is suitable for use with flowmeters with a coil output signal.

The screen of the signal wire must be connected to the common ground terminal. The input signal type has to be selected with the correct SETUP-function (read par. 3.2.3.)


Two sensitivity levels can be selected with the SETUP-function:

COIL LO: sensitivity from about 90mVp-p.

COIL HI: sensitivity from about 20mVp-p.

Type ZF (option): offers for setting COIL HI : sensitivity from about 10mVp-p.

Type ZG (option): offers for setting COIL HI : sensitivity from about 5mVp-p.

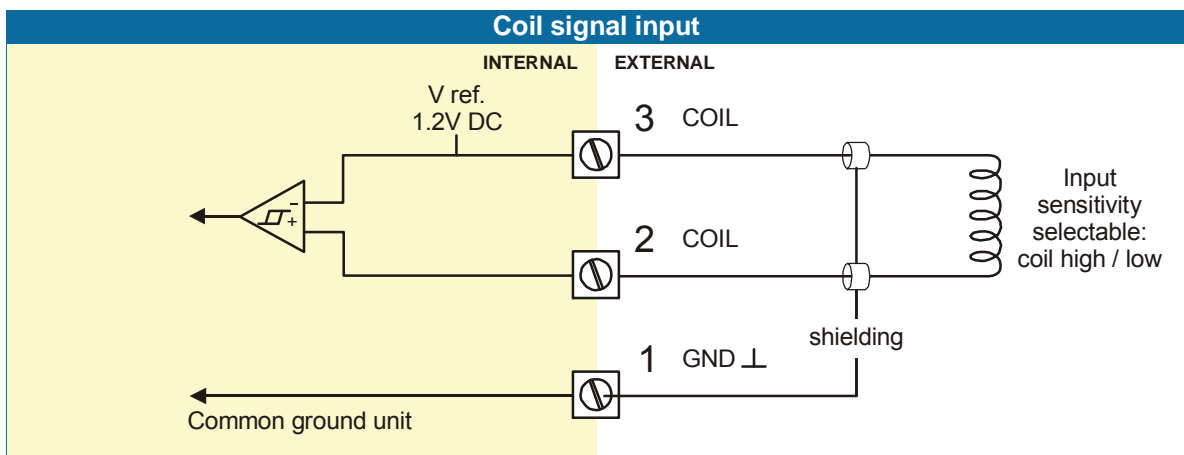

**Terminal 4-5: POWER SUPPLY UNIT - TYPE PD / PX:**


To power the unit an internal battery can be used (type PB) and / or an external DC power supply of 8-30V DC (type PX) or 16-30V DC (type PD).

Connect the "-" to terminal 4 and the "+" to terminal 5. When power is applied to these terminals, the optional internal battery will be disabled automatically to extend the battery life time.

**Terminal 7-8; Pulse output – type OT:**

With SETUP 6, the function of this output is set to a scaled pulse output.

A passive transistor output is available with this option. Max. driving capacity 300mA@50V DC.

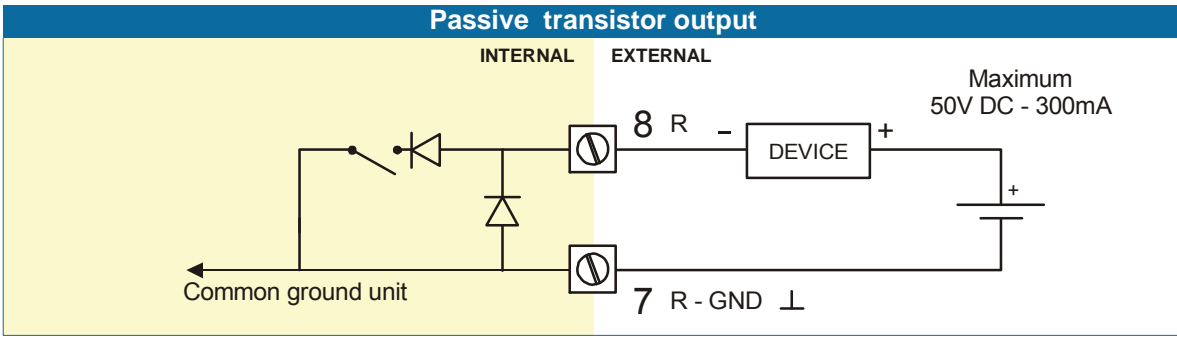

**Terminal 9-10: Power supply backlight - type ZB (option):**

To power the backlight, a voltage in the range 20-30V DC has to be connected.

Maximum current 30mA. Connect the "-" to terminal 9 and the "+" to terminal 10.

**4.4.3. TERMINAL CONNECTORS WITH POWER SUPPLY - TYPE : PF / PM**

*For Intrinsically Safe applications: skip to chapter 5.*

The following terminal connectors are available:

POWER SUPPLY TYPE: PF / PM			PULSE OUTPUT TYPE: OT		SENSOR SIGNAL TYPE: P: PULSE INPUT		
GND ⊥	1 N	2 L1	3 R⊥	4 R	5 ⊥	6 SIGNAL	7 +↓

Fig. 9: Overview of terminal connectors TUR0141-(PF / PM) and options.

**SENSOR SUPPLY**

**Type PF-PM: Sensor supply: 1.2, 3.2V, 8.2V, 12V or 24 V:**

With this option, a real power supply for the sensor is available. The flowmeter can be powered with 1.2, 3.2, 8.2, 12 or 24 V DC (max. 400mA@24V). The voltage is selected with the three switches inside the enclosure.



- *Warning: be sure that all the leads to the terminals are disconnected from the unit when the internal plastic protection cover has been removed !*
- *HIGH VOLTAGE 400V !! NEVER connect the mains power supply to the unit when the plastic protection cover has been removed !!!*
- *For the TUR0141 always set the sensor supply to 1.2V (coil)*

First, remove the terminal strip(s) after which the internal plastic cover can be removed. The switches are located on the right hand side as indicated:

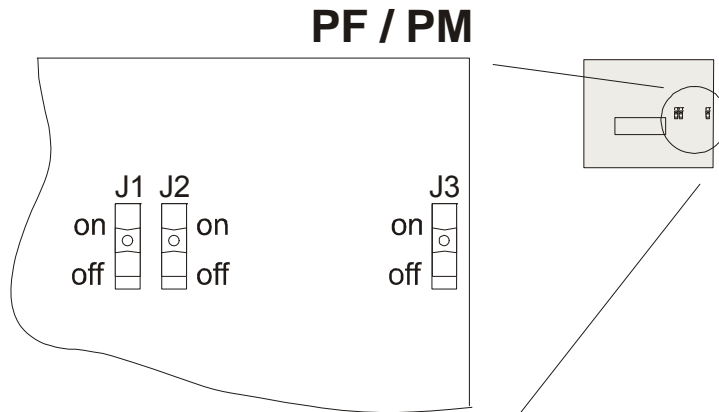


Fig. 10: switch position voltage selection (type PF and PM).

**Switch positions / sensor supply voltage:**

VOLTAGE SELECTION				
SWITCH	1.2 / 3.2V DC	8.2V DC	12V DC	24V DC
J1	on	off	off	off
J2	on or off	on	on	off
J3	on or off	on	off	on or off

**REMARKS: TERMINAL CONNECTORS:**


**Terminal GND- 01- 02; POWER SUPPLY only available with type PF / PM:**

OPTION	SENSOR SUPPLY	Terminal		
		GND	01	02
PF 24V AC ± 10%	1.2, 3.2, 8.2, 12, 24V max. 400mA@24V DC		AC	AC
PF 24V DC ± 10%	1.2, 3.2, 8.2, 12, 24V max. 400mA@24V DC	L-	L+	
PM 115-230V AC ± 10%	1.2, 3.2, 8.2, 12, 24V max. 400mA@24V DC	EARTH	AC	AC
Note PF / PM	The total consumption of the sensor and backlight type ZB may not exceed 400mA@24V DC.			

**Terminal 3-4; Pulse output – type OT:**

With SETUP 6, the function of this output is set to a scaled pulse output.

A passive transistor output is available with this option. Max. driving capacity 300mA@50V DC.

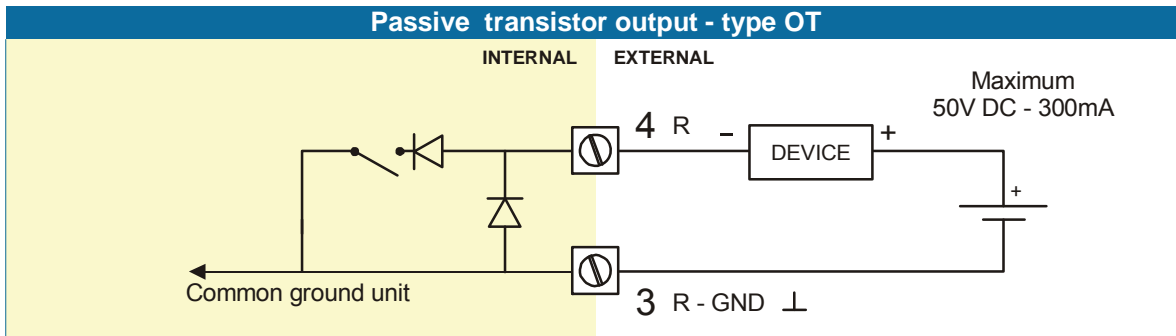

**Terminals 1-3; Flowmeter input:**

The TUR0141 is suitable for use with flowmeters with a coil output signal.

The screen of the signal wire must be connected to the common ground terminal. The input signal type has to be selected with the correct SETUP-function (read par. 3.2.3.)


Two sensitivity levels can be selected with the SETUP-function:

COIL LO: sensitivity from about 90mVp-p.

COIL HI: sensitivity from about 20mVp-p.

Type ZF (option): offers for setting COIL HI : sensitivity from about 10mVp-p.

Type ZG (option): offers for setting COIL HI : sensitivity from about 5mVp-p.

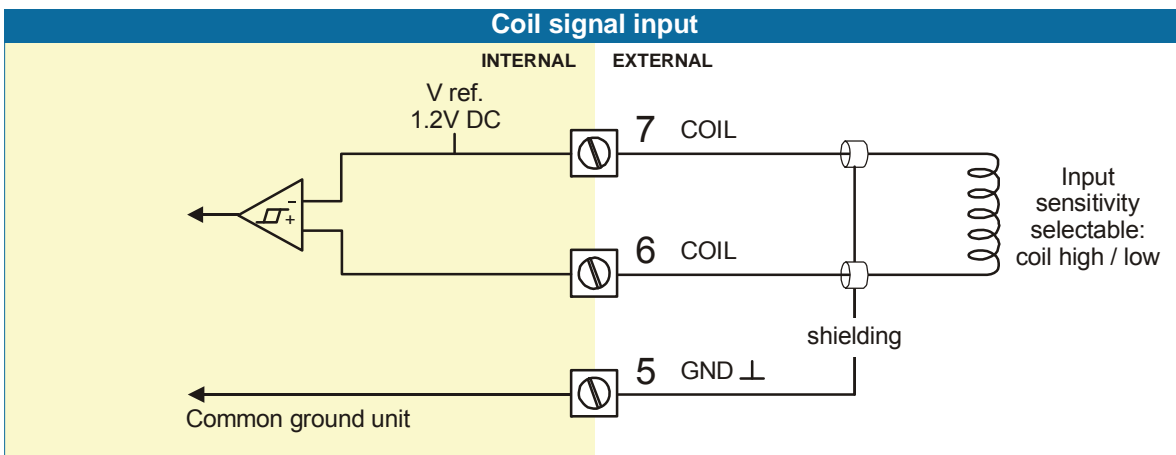



## 5. INTRINSICALLY SAFE APPLICATIONS

### 5.1. GENERAL INFORMATION AND INSTRUCTIONS:



- *Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this Operating Manual before carrying out its instructions.*
- *This device may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the cabinet has been opened (danger of electric shock). The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

#### *Safety Instructions*



- *Certificates, safety values, control drawing and declaration of compliance can be found in the document named: "Fluidwell F0..-P-XI - Documentation for Intrinsic Safety".*
- *For installation under ATEX directive: this intrinsically safe device must be installed in accordance with the ATEX directive 94/9/EC and the product certificate KEMA 05ATEX1168 X.*
- *For installation under IECEx scheme: this intrinsically safe device must be installed in accordance the product certificate IECEx KEM 08.0006X.*
- *For installation under CSA: this intrinsically safe device must be installed in accordance the product certificate CSA.08.2059461 X.*
- *For installation under FM: this intrinsically safe device must be installed in accordance with the Certificate / Project ID: 3033306.*
- *The control drawing number FWCD-0003 can be found in the document named: "Fluidwell F0..-P-XI - Documentation for Intrinsic Safety".*
- *Exchange of Intrinsically Safe battery FWLiBAT-00x with certificate number KEMA 03ATEX1071 U or IECEx KEM 08.0005U is allowed in Hazardous Area. See paragraph 5.4. for battery replacement instructions.*

#### *Please note*



- *Special conditions for safe use mentioned in both the certificate and the installation instructions must be observed for the connection of power to both input and / or output circuits.*
- *When installing this device in hazardous areas, the wiring and installation must comply with the appropriate installation standards for your industry.*
- *Study the following pages with wiring diagrams per classification.*

#### **Serial number and year of production**

This information can be looked-up on the display: setup function (par. 3.2.2.).

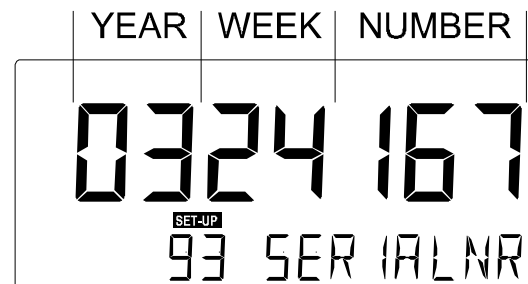


Fig. 11: Example serial number.

**Label information pulse input type - F0..P-XI (inside and outside the enclosure)**

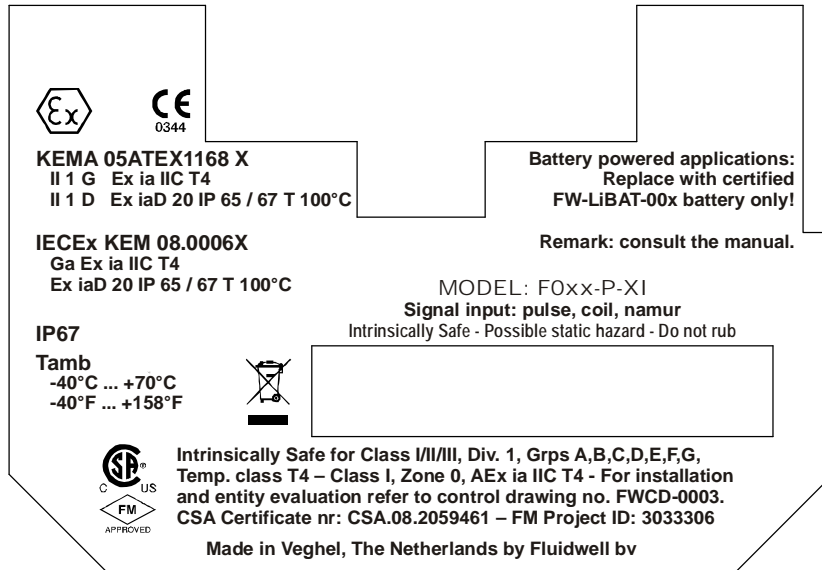
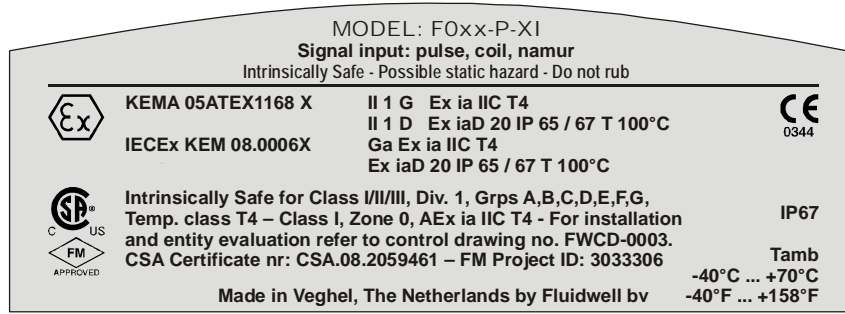


Fig. 12: Label information Intrinsic Safe application.

**5.2. TERMINAL CONNECTORS INTRINSICALLY SAFE APPLICATIONS:**

**Terminal connectors TUR0141-(PC / PD / PX)-XI-(ZB):**

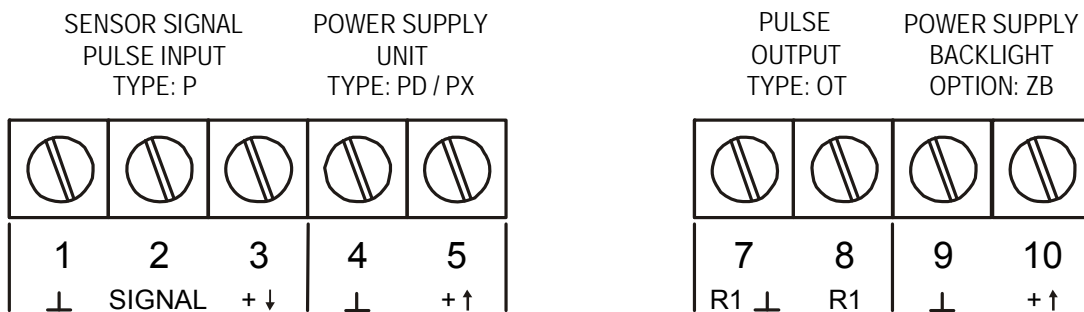


Fig. 13: Overview terminal connectors XI - Intrinsic Safe applications.

**Remarks power supply options:**

**Type PC:** offers - additional to type PX - an internal Intrinsic Safe lithium battery. This ATEX certified battery (FW-LiBATT-xxx) may be changed in hazardous area.

**Type PD:** offers with terminal 6 - additional to type PX - a real sensor supply of 8.2V DC to power a Namur sensor for example. (Not applicable for TUR0141)

**Type PX:** as standard, all intrinsically product are supplied with terminal 4 and 5 to power the product externally.

5.3. CONFIGURATION EXAMPLES INTRINSICALLY SAFE APPLICATIONS:

Configuration example no. 1

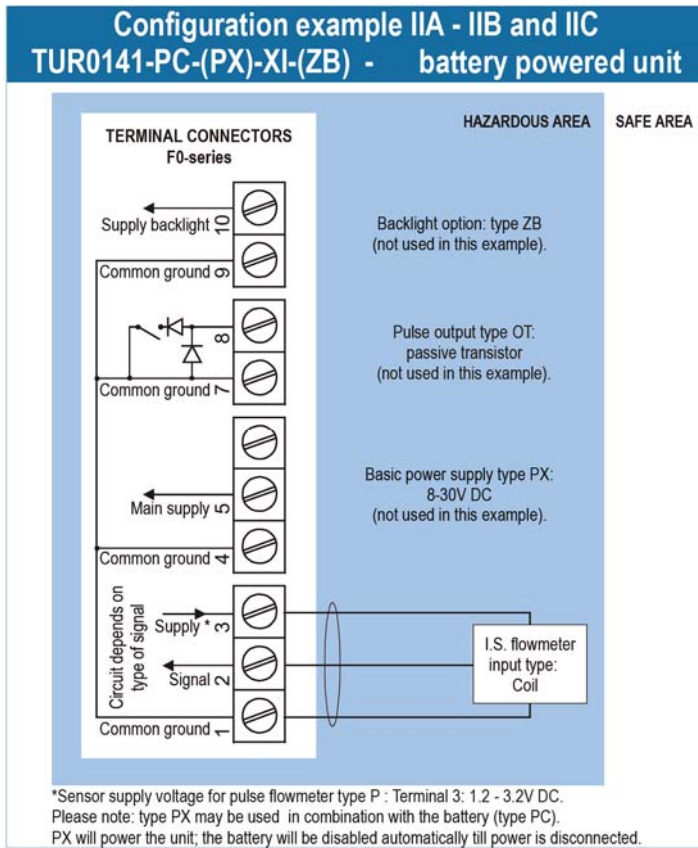


Fig. 14: Configuration example Intrinsically Safe.

Configuration example no. 2

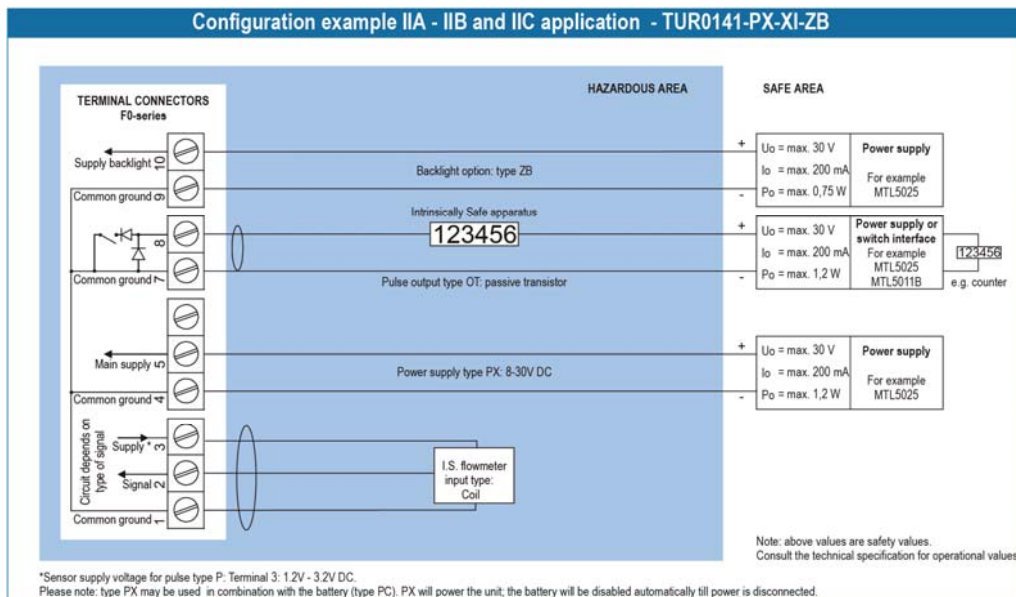


Fig. 15: Configuration example Intrinsically Safe.

5.4. BATTERY REPLACEMENT INSTRUCTIONS

INSTRUCTION SHEET BATTERY REPLACEMENT FW-LiBAT-001

FW-LiBAT-001 - INST001

**Manufacturer**  
Fluidwell bv - The Netherlands  
www.fluidwell.com - sales@fluidwell.com

**Safety Instructions**  
**WARNING:** Fire, explosion or severe burns may result if mistreated. Do not recharge, crush, disassemble, incinerate, heat above 100°C (212°F) or expose contents to water.

**Replacement Instructions**  
Mounting, electrical installation, start-up and maintenance of this device may only be carried out by trained personnel authorized by the operator of the facility.  
Personnel must read and understand this Instruction before carrying out its instructions.

It is allowed to replace the Intrinsicly Safe battery FW-LiBAT-001 in hazardous area. The battery may only be replaced with an original FW-LiBAT-001 manufactured by Fluidwell bv.


For replacement, unplug the connector carefully and lift the old battery out of the mounting clip. The new battery can be placed in the clip and the connector plugged on the board.



**Disposal**  
Disposal should be done in accordance with applicable regulations, which vary from country to country. Trashing of used batteries is forbidden and disposal can be done through non-profit organizations mandated by local authorities or organized by professionals.

**Battery label:**

CE 0344	II 1 G Ex ia IIC Ga Ex ia IIC	KEMA 03ATEX1071 U IECEx KEM 08.0005U
Fluidwell bv - Intrinsicly Safe Battery		
Consult manual for replacement instructions.		
Part. no.: FW-LiBAT-001		
Uo = 3.9V	Co = 100µF	WARNING: Fire, explosion or severe burns may result if mistreated. Do not recharge, crush, disassemble, incinerate, heat above 100°C (212°F) or expose contents to water.
Io = 35mA	Lo = 25mH	
Po = 35mW	Ta = -40°C to +70°C	
Primary Lithium Battery - Only replace with Fluidwell i.s. battery pack !		

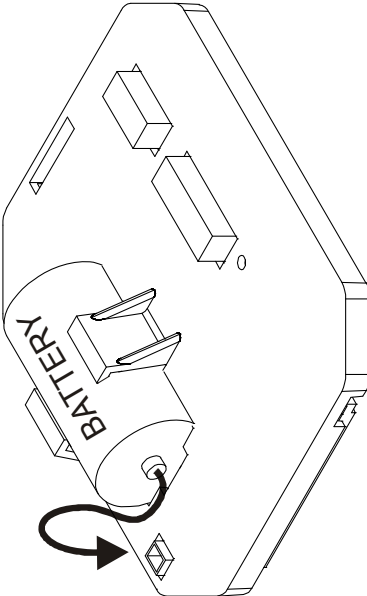**F0-series:**



Caution !




Fig. 16: Battery replacement instructions Intrinsicly Safe Battery.

## 6. MAINTENANCE

### 6.1. GENERAL DIRECTIONS



Caution !

- *Mounting, electrical installation, start-up and maintenance of the instrument may only be carried out by trained personnel authorized by the operator of the facility. Personnel must read and understand this manual before carrying out its instructions.*
- *The TUR0141 may only be operated by personnel who are authorized and trained by the operator of the facility. All instructions in this manual are to be observed.*
- *Ensure that the measuring system is correctly wired up according to the wiring diagrams. Protection against accidental contact is no longer assured when the housing cover is removed or the panel cabinet has been opened (danger from electrical shock). The housing may only be opened by trained personnel.*
- *Take careful notice of the " Safety rules, instructions and precautionary measures " in the front of this manual.*

The TUR0141 does not require special maintenance unless it is used in low-temperature applications or surroundings with high humidity (above 90% annual mean). It is the users responsibility to take all precautions to dehumidify the internal atmosphere of the TUR0141 in such a way that no condensation will occur, for example by placing dry silica-gel sachet in the casing just before closing it. Furthermore, it is required to replace or dry the silica gel periodically as advised by the silica gel supplier.

#### **Battery life-time:**

It is influenced by several issues :

- Display update: fast display update uses significantly more power.
- Pulse output.
- Low temperatures; the available power will be less due to battery chemistry.



Note !

**Note:** *It is strongly advised to use only necessary functions.*

#### **Check periodically:**

- The condition of the casing, cable glands and front panel.
- The input/output wiring for reliability and aging symptoms.
- The process accuracy. As a result of wear and tear, re-calibration of the flowmeter might be necessary. Do not forget to re-enter any subsequent K-factor alterations.
- The indication for low-battery.
- Clean the casing with soapy-water. Do not use any aggressive solvents as these might damage the coating.

### 6.2. REPAIR

This product cannot be repaired by the user and must be replaced with an equivalent certified product. Repairs should only be carried out by the manufacturer or his authorized agent.

## APPENDIX A: TECHNICAL SPECIFICATION

### GENERAL

Display	
Type	High intensity reflective numeric and alphanumeric LCD, UV-resistant.
Digits	Seven 17mm (0.67") and eleven 8mm (0.31"). Various symbols and measuring units.
Refresh rate	User definable: 8 times/sec - 30 secs.
Type ZB (option)	Bi-color configurable LED-backlight - green or amber. Intensity adjustable from the keyboard.

Enclosures	
General	Die-cast aluminum or GRP (Glassfibre Reinforced Polyamide) enclosure with Polycarbonate window, silicone and EPDM gaskets. UV stabilized and flame retardant material.
Control Keys	Three industrial micro-switch keys. UV-resistant silicone keypad.
Painting	Aluminum enclosure only: UV-resistant 2-component industrial painting.
Panel-mount enclosures	Dimensions: 130 x 120 x 60mm (5.10" x 4.72" x 2.38") – LxHxD.
Classification	IP65 / NEMA 4X
Panel cut-out	115 x 98mm (4.53" x 3.86") LxH.
Type HC	GRP panel-mount enclosure
Type HB	Aluminum panel-mount enclosure
Field/wall-mount enclosures	Dimensions: 130 x 120 x 75mm (5.10" x 4.72" x 2.95") – LxHxD.
Classification	IP67 / NEMA4X
Aluminum enclosures	
Type HA	Drilling: 2x PG9 – 1x M20.
Type HM	Drilling: 2x M16 – 1x M20.
Type HN	Drilling: 1x M20.
Type HO	Drilling: 2x M20.
Type HP	Drilling: 6x M12.
Type HT	Drilling: 1x ½"NPT.
Type HU	Drilling: 3x ½"NPT.
Type HV	Drilling: 4x M20
Type HZ	No drilling.
GRP enclosures	
Type HD	No drilling.
Type HE	Drilling: 2x 16mm (0.63") – 1x 20mm (0.78").
Type HF	Drilling: 1x 22mm (0.87").
Type HG	Drilling: 2x 20mm (0.78").
Type HJ	Drilling: 3x 22mm (0.87").
Type HH	Drilling: 6x 12mm (0.47").
Type HK	Flat bottom - no drilling.
ABS enclosure	
Type HS	Silicone free ABS enclosure with EPDM and PE gaskets. UV-resistant polyester keypad. (no drilling)

Operating temperature	
Operational	-40°C to +80°C (-40°F to +178°F).
Intrinsically Safe	-40°C to +70°C (-40°F to +158°F).

Power requirements	
Type PB	Lithium battery - life-time depends upon settings - up to 5 years.
Type PC	Intrinsically Safe lithium battery - life-time depends upon settings - up to 5 years.
Type PD	16-30 V DC. Power consumption max. 1 Watt.
Type PF	24V AC/DC $\pm$ 10%. Power consumption max. 15 Watt.
Type PM	115-230V AC $\pm$ 10%. Power consumption max. 15 Watt.
Type PX	8-30 V DC (also available with PB / PC). Power consumption max. 0.3 Watt.
Type ZB	20-30V DC. Power consumption max. 1 Watt. Note: with type PF / PM: internally powered.
Note I.S. application	for intrinsically safe applications, consult the safety values in the certificate.

<b>Sensor excitation</b>	
Type PB / PC / PX	Sensor supply voltage: 1.2V DC for coil pick-up. Please note: this is not a real sensor supply. Only suitable for sensors with a very low power consumption like coils (sine wave) and reed-switches. Analog sensors type A / U: sensor supply not available.
Type PD	P: sensor supply 1.2, 3.2, 8.2V DC - max. 5mA@8.2V DC. Always select 1.2V for the TUR0141
Type PF / PM	P: sensor supply 1.2, 3.2, 8.2, 12 and 24V DC - max. 400mA@24V DC. Always select 1.2V for the TUR0141

<b>Terminal connections</b>	
Type:	Removable plug-in terminal strip. Wire max. 1.5mm <sup>2</sup> and 2.5mm <sup>2</sup>

<b>Data protection</b>	
Type	EEPROM backup of all settings. Data retention at least 10 years.
Pass code	Configuration settings can be pass code protected.

<b>Hazardous area (option)</b>	
Intrinsically safe Type XI	<b>ATEX approval:</b> II 1 G Ex ia IIC T4 II 1 D Ex iaD 20 IP 65 / 67 T 100°C  <b>IECEx approval:</b> Ga Ex ia IIC T4 Ex iaD 20 IP 65 / 67 T 100°C  <b>CSA / FM approval :</b> IS Class I/II/III, Division 1 Groups A to G T4 Class I zone 0 AEx ia IIC T4
Explosion proof Type XF	ATEX approval ref.: <EX> II 2 GD EEx d IIB T5. Weight appr. 15kg. Dimensions of enclosure: 350 x 250 x 200mm (13.7" x 9.9" x 7.9") LxHxD.

<b>Environment</b>	
Electromagnetic compatibility	Compliant ref: EN 61326 (1997), EN 61010-1 (1993)
Low voltage directive	Compliant ref: EN60950.

## INPUT

<b>Flowmeter</b>	
Type P	Coil/sine wave (minimum 20mVpp or 80mVpp - sensitivity selectable)
Frequency	Minimum 0 Hz - maximum 7 kHz for flowrate.
K-Factor	0.000010 - 9,999,999 with variable decimal position.
Note	For coil signal input: higher sensitivity is available - type ZF (10mVpp) / type ZG (5mVpp).

## OUTPUT

<b>Pulse output</b>	
Function	scaled pulse output - max frequency 500Hz.
Type OT	One passive transistor output - not isolated. Load max. 50V DC - 300mA.

<b>OPERATIONAL</b>	
<b>Operator functions</b>	
Displayed functions	<ul style="list-style-type: none"> <li>total and/or flowrate.</li> <li>total and accumulated total.</li> <li>total can be reset to zero by pressing the CLEAR-key twice.</li> </ul>
<b>Total</b>	
Digits	7 digits.
Units	FULL Setup FAST Setup
	L, m3, GAL, USGAL, KG, lb, bbl, no unit. GAL, bbl
Decimals	0 - 1 - 2 or 3.
Note	total can be reset to zero.
<b>Accumulated total</b>	
Digits	11 digits.
Units / decimals	according to selection for total.
<b>Flowrate</b>	
Digits	7 digits.
Units	FULL Setup FAST Setup
	mL, L, m3, GAL, KG, Ton, lb, bl, cf, RND, ft3, scf, Nm3, NI, igal - no units. GAL, bbl
Decimals	0 - 1 - 2 or 3.
Time units	/sec - /min - /hr - /day.



## APPENDIX B: PROBLEM SOLVING

In this appendix, several problems are included that can occur when the TUR0141 is going to be installed or while it is in operation.

### Flowrate displays "0 / zero" while there is flow (total is counting):

Check:

- SETUP 22 / 25: are the K-Factor time unit correct?

### The pass code is unknown:

If the pass code is not 1234, there is only one possibility left: call your supplier.

### ALARM

When the alarm flag starts to blink an internal alarm condition has occurred. Press the "select button" several times to display the 4-digit error code. The codes are:

0001: irrecoverable display-data error: data on the display might be corrupted.

0002: irrecoverable data-storage error: the programming cycle might have gone wrong: check programmed values.

0003: error 1 and error 2 occurred simultaneously

The alarm condition will almost certainly be handled internally and if all mentioned values still appear correct, no intervention by the operator is needed. If the alarm occurs more often or stays active for a longer time, please contact your supplier.

### Cannot access certain setup items:

Check if FULL setup is enabled: *See page 12.*

## APPENDIX C: PRECONFIGURED FAST SETUP SETTINGS

Below table shows the preconfigured FAST Setup settings and corresponding flowmeters.

PRECONFIGURED FAST SETUP SETTINGS												
FLOWMETER TYPE		TOTAL DISPLAY				FLOWRATE DISPLAY						FLOWMETER SENSITIVITY
		display		TUR0141 setting		display			TUR0141 setting			
Type/Part no.	K-factor	Unit	dec	K-factor	dec Kf	Unit	time per	dec	Kf:	dec Kf	Calc	Signal
TM0038	20000/	gal/	2	20000/	0	gal/	/min	2	20000/	0	200	coil Hi
	840000	Bbl	2	840000	0	Bbl		2	840000		200	coil Hi
TM0050	12000	gal/	2	12000/	0	gal/	/min	2	12000/	0	200	coil Hi
	12000	Bbl	2	504000	0	Bbl		2	504000		200	coil Hi
TM0075	3000/	gal/	2	3000/	0	gal/	/min	2	3000/	0	200	coil Hi
	126000	Bbl	2	126000	0	Bbl		2	126000		200	coil Hi
TM0078	2800/	gal/	2	2800/	0	gal/	/min	2	2800/	0	200	coil Lo
	117600	Bbl	2	117600	0	Bbl		2	117600		200	coil Lo
TM0100	920/	gal/	1	92000/	2	gal/	/min	2	92000/	2	100	coil Lo
	38640	Bbl	1	3864000	2	Bbl		2	3864000	2	100	coil Lo
TM0150	320/	gal/	1	32000/	2	gal/	/min	2	32000/	2	100	coil Lo
	13440	Bbl	1	1344000	2	Bbl		2	1344000	2	100	coil Lo
TM0200L	320/	gal/	1	32000/	2	gal/	/min	0	32000/	2	100	coil Lo
	13440	Bbl	1	1344000	2	Bbl		0	1344000	2	100	coil Lo
TM0200	45/	gal/	0	45000/	3	gal/	/min	0	45000/	3	10	coil Lo
	1890	Bbl	0	1890000	3	Bbl		0	1890000	3	10	coil Lo
TM0300	50/	gal/	0	50000/	3	gal/	/min	0	50000/	3	10	coil Lo
	2100	Bbl	0	2100000	3	Bbl		0	2100000	3	10	coil Lo
TM0400	29/	gal/	0	29000/	3	gal/	/min	0	29000/	3	10	coil Lo
	1218	Bbl	0	1218000	3	Bbl		0	1218000	3	10	coil Lo
TM0600	6,5/	gal/	0	65000/	4	gal/	/min	0	65000/	4	10	coil Lo
	273	Bbl	0	2730000	4	Bbl		0	2730000	4	10	coil Lo
TM0800	3/	gal/	0	30000/	4	gal/	/min	0	30000/	4	10	coil Lo
	126	Bbl	0	1260000	4	Bbl		0	1260000	4	10	coil Lo
TM1000	1,75/	gal/	0	17500/	4	gal/	/min	0	17500/	4	10	coil Lo
	73,5	Bbl	0	73000	4	Bbl		0	73000	4	10	coil Lo
Select with SETUP 02		Select with SETUP03	*	*	*	Select with SETUP03	Select with SETUP04	*	*	*	*	*

\* These settings are determined by the TUR0141 based on selections made via SETUP02 – 04.

## INDEX OF THIS MANUAL

accumulated total	7	Intrinsic safety	25
actual settings	36	IP classification	17
alarm output	22, 24	keys	6
backlight	22	low-battery	7
color	15	main-function	9
density	15	maintenance	29
battery life time	15, 29	manual version	3
Battery replacement	28	model	16
clear total	7	operational	6
coil-signal	21, 24	operator level	7
configuration	8	pass code	16, 33
contents	4	power supply	21, 23
dimensions	18	problem solving	33
display		pulse output	16
function	15	pulse length / period time	16
display update time	15	rate / total	7
flowmeter		sensor supply voltage	23
signal	16	serial number	16
flowmeter input	21, 24	setup-level	8
flowrate		software version	3
calculation	14	subfunction	9
cut-off time	14	tagnumber	16
decimals	14	technical specification	30
decimals k-factor	14	terminal connectors	21, 22
measuring unit	14	total	
time unit	14	decimals	13
functional description	5	decimals k-factor	13
hardware version	3	k-factor	13, 14
high alarm output	22	measuring unit	13
installation	17	version software	16
intrinsic safety	25	voltage selection sensor supply	23

## LIST OF FIGURES IN THIS MANUAL

Fig. 1: Typical application for the TUR0141.....	5
Fig. 2: Control Panel.....	6
Fig. 3: Example of display information during process. ....	7
Fig. 4: Example of low-battery alarm.....	7
Fig. 5: Dimensions Aluminum enclosures.....	18
Fig. 6: Dimensions GRP enclosures.....	19
Fig. 7: Grounding aluminum enclosure with option PM 115-230V AC.....	20
Fig. 8: Overview of terminal connectors TUR0141-(PB / PD / PX) and options. ....	21
Fig. 9: Overview of terminal connectors TUR0141-(PF / PM) and options.....	22
Fig. 10: switch position voltage selection (type PF and PM).....	23
Fig. 11: Example serial number. ....	25
Fig. 12: Label information Intrinsically Safe application.....	26
Fig. 13: Overview terminal connectors XI - Intrinsically Safe applications.....	26
Fig. 14: Configuration example Intrinsically Safe.....	27
Fig. 15: Configuration example Intrinsically Safe.....	27
Fig. 16: Battery replacement instructions Intrinsically Safe Battery.....	28

## LIST OF CONFIGURATION SETTINGS

SETTING	DEFAULT	DATE:	DATE:
<b>0 - PRECONFIG</b>	Enter your settings here		
01 setup	FAST		
02 config	TM0038		
03 unit	GAL		
04 time unit	Min		
<b>1 - TOTAL</b>			
11 unit	GAL		
12 decimals	222222.22		
13 K-factor	0020.000		
14 decimals K-factor	0		
<b>2 - FLOWRATE</b>			
21 unit	GAL		
22 time unit	/min		
23 decimals	222222.22		
24 K-factor	0020.000		
25 decimals K-factor	0		
26 calculation / pulses	200		
27 cut-off time	030.0 sec.		
<b>3 - DISPLAY</b>			
31 function	total		
32 backlight	off		
33 brightness	5		
<b>4 - POWER MANAGEMENT</b>			
41 LCD-new	1 sec.		
42 mode	operational		
<b>5 - FLOWMETER</b>			
51 signal	coil-hi		
<b>6 - PULSE OUTPUT</b>			
61 pulse width	0.000		
62 decimals	0000000		
63 pulse per	1000		
<b>7 - OTHERS</b>			
71 model	F0-P	F0-P	F0-P
72 type	TUR0141	TUR0141	TUR0141
73 software version	03.____.____	03.____.____	03.____.____
74 serial number	-----	-----	-----
75 pass code	0000		
76 tagnumber	0000000		